

Jumpers for LCD on ver 06 UI HW board with HY28B:

9.6.2017

S53DZ

Jumper setting for LCD SPI mode:

sig	LCD pin	STM32	jmp_ON	jmp_OFF
LCD_SCK	13	PB13	R32a	R32b-
LCD_SDO	16	PC2	R30a	-R32u
LCD_SDI	17	PC3	R31a	

Jumper setting for LCD TS (touch screen) mode:

sig	LCD pin	STM32	jmp_ON	jmp_OFF
TP_CS	32	PA9	R33a	
TP_SCK	33	PB13	R32	
TP_SDI	34	PC3	R31	
TP_SDO	35	PC2	R30	
TP_IRQ	36	PA4	R34a	