

(LONG LEAF AT ZERO)



Fig. 3

COMM. P. C. MTG. SCREWS— for fine adjustment

VERTICAL ALIGNMENT DARTS

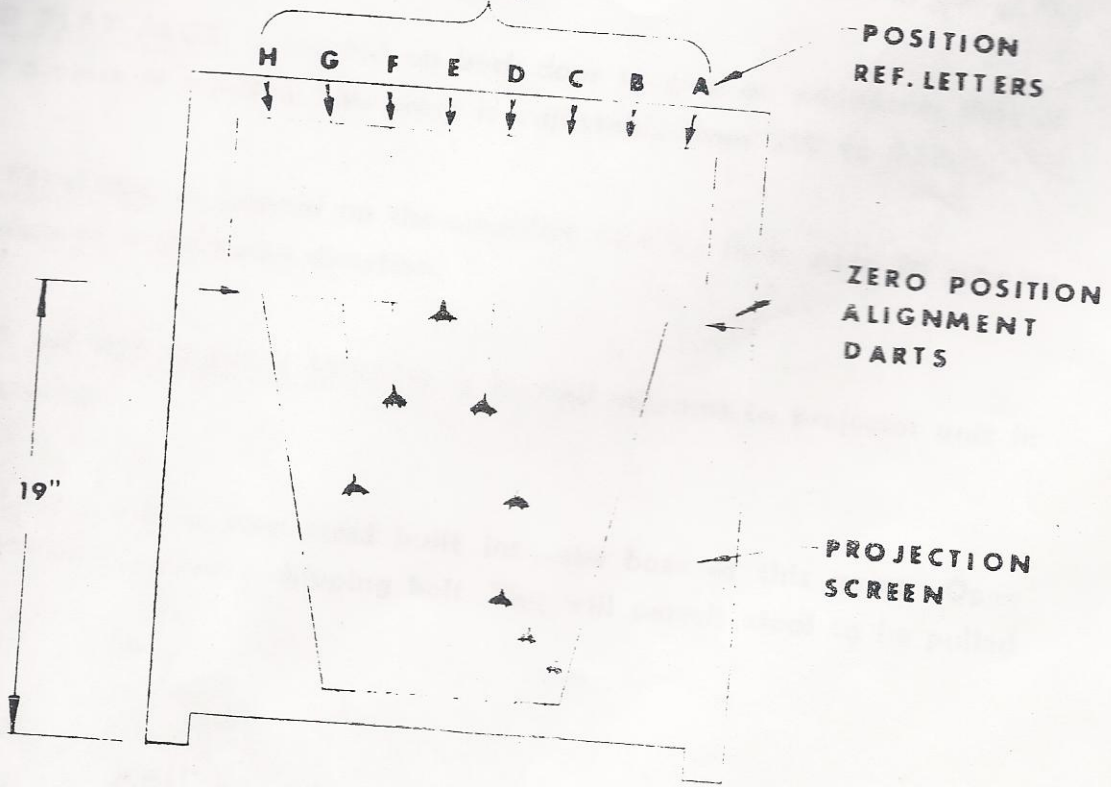


Fig. 4