

CAUTION

IT IS EXTREMELY IMPORTANT THAT PROPER POLARITY BE OBSERVED. THE POSITIVE BATTERY LEAD MUST GO TO THE TWO TERMINALS CLEARLY MARKED ON BACK OF THE TRANSCEIVER. THE NEGATIVE BATTERY LEAD MUST GO TO THE TRANSCEIVER CHASSIS GROUND, AND THE BANANA PLUG IS FOR THIS PURPOSE. EVEN MOMENTARY CONNECTION OF THE WRONG POLARITY WILL DESTROY THE TRANSISTORS, AND VOID THE ATLAS WARRANTY.

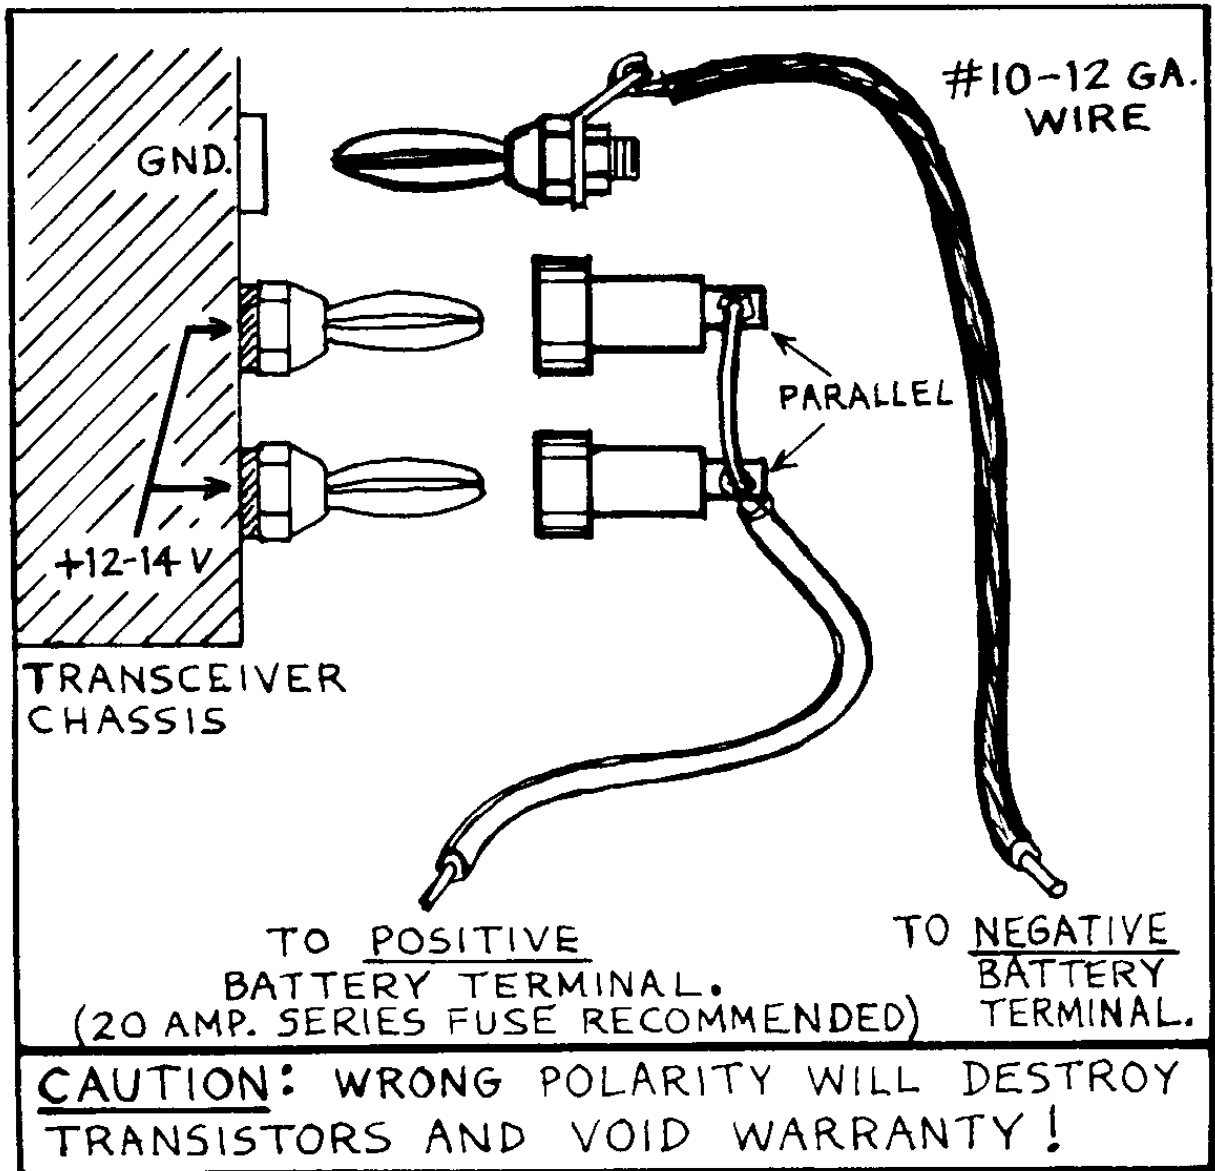


Figure 2-5. D.C. Power Connections