Print your company information here. Set up in Preferences / Print Options.

Socket L
DB9 Female

Socket R
DB25 Male
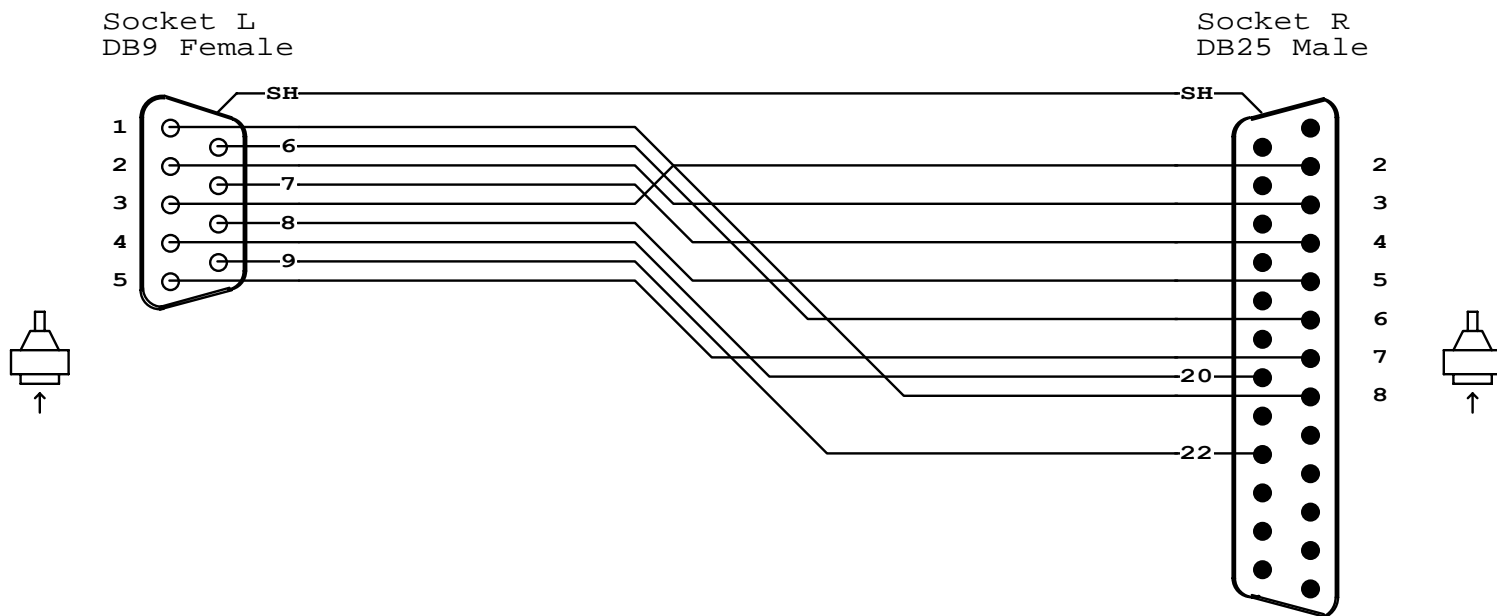
N E T L I S T

L-SH	**R-SH**
L-1	**R-8**
L-2	**R-3**
L-3	**R-2**
L-4	**R-20**
L-5	**R-7**
L-6	**R-6**
L-7	**R-4**
L-8	**R-5**
L-9	**R-22**

N O T E S

DB9 to DB25 ADAPTER
Signals on the DB9 DTE side are directly mapped to the DB25 assignments for a DTE device. Use this to adapt a 9-pin COM connector on the back of a computer to mate with a 25-pin serial DCE devices, such as a modem. This adapter may also be in the form of a cable.

L A B E L

DB9 Female: Connect to DTE (computer)
DB25 Male: Connect to DCE (modem)
CAMI ID 203